

# Use and maintenance

## Operating guidelines AS4325B



Turn on the machine and verify there is enough battery power to complete the work. Charge batteries if required.



Lift the deck by pressing the pedal down and to the left. The squeegee is raised and lowered with the deck.



Place the brush or pad-holder under the center of the drive plate and lower the deck by pressing the foot pedal down and to the right.




Turn the machine ON, and press one of the safety switches to install the brush/pad-holder. If necessary, repeat the procedure until the brush/pad-holder is fully engaged. The brush pad-holder can also be installed manually if needed. Use the black lever to adjust the handle height to a comfortable position.



Remove the red cover, fill the tank 1/2 full, then add an appropriate amount of low foaming detergent. Complete the filling of the tank, and replace the red cover.



You can check the level of the solution anytime using the red ball on the left side of the machine.

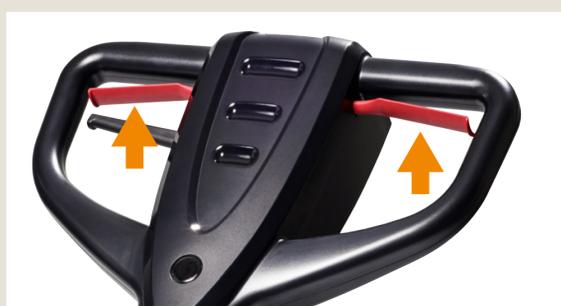

Start cleaning by placing the hands on the safety switches.



Press the + or – buttons to increase / decrease the solution flow rate.



Lift the squeegee up by hand until it locks in the UP position, and turn off the vacuum, to perform double scrubbing. To return to normal working mode, use the red lever to release the squeegee, and turn the vacuum back on.



When scrubbing is complete, turn off the machine to perform the following maintenance.



Additional features (battery version only):

- **Eco Mode** optimizes use of water and detergent to extend runtime and increase productivity.
- **Silent Mode** allows for cleaning in sound-sensitive areas, or during daytime.

# Maintenance

## Operating guidelines AS4325B



When scrubbing is complete, turn off the on/off button to perform the following maintenance.



**Daily:** Empty the clean water tank using the solution tank drain knob under the machine.



**Daily:** Empty the recovery tank using the recovery empty hose. Bend the soft part before removing the cap to control the flow.



**Daily:** Inspect and rinse the float ball cage and inspect and clean the lid gasket if required.



**Daily:** Remove the squeegee, and clean. Inspect the blades and flip them or replace them if required.



**Daily:** With the machine turned on and the deck lifted, press the click off button to release the brush/pad holder then clean and inspect before next use.



**Weekly:** Inspect the solution filter and clean if required.



**Daily:** Leave the recovery tank lid open to let the tank dry after it's been cleaned to avoid bad odor.



Charge the batteries whenever the machine is not in use. Connect the charger cable to the machine socket, then plug the cable into a grounded 3-prong electrical outlet. Red LED will be on during charging, and the Green LED will turn on when charging is complete.

Local Viper dealer: \_\_\_\_\_

Phone number: \_\_\_\_\_

SN: \_\_\_\_\_