## CarpetMaster 100 Series How To

Prepare for Use

1



Loop cord then lock in restraint clip.

2



Plug machine into an appropriate electrical outlet. Turn on main power switch.

3



Step on the pedal then tilt the vacuum handle backwards to begin vacuuming.

Clearing a Clog

1



Restricted airflow light indicator comes on, please check the following things.

2



Check to see if bag is full or if the tube, hose or nozzle is blocked.
Replace bag if needed.

3




Remove the upper hose and wand to inspect for clogged debris. Detach the wand receptacle.

4



Release and remove the brush cover by unlocking the bearing lock then pull brush out. 5

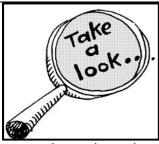

Inspect lower hose by looking through the wand receptacle to the brush housing area. (You should have a clear view. If not, there is a clog)

6



Remove debris by pushing it forward via the brush opening (use a long narrow object if needed). Reinstall brush and brush cover. Reattach wand receptacle.

## CarpetMaster 100 Series How To

## Maintenance



Disconnect power cord, open cover latch, remove and replace the HEPA-filter then reinstall the filter cover.



Disconnect power cord, open dust lid compartment and remove the dirty pre-filter. Wash with warm water (let dry) or install a new pre-filter then close the lid. Replace deodorizer pad if needed.



(if necessary) then close filter cover.

\*Never operate the machine without the Exhaust Filter in

place.

6

Changing or Cleaning the Brush

Unlock the bearing block, remove brush (clean or replace), slide brush into the bearing block then lock by turning clockwise.

Changing the paper dust bag

Remove dust lid. Gently remove the bag. Insert new *(unfolded)* bag in the bag housing. Install back cover.



Remove dust lid. Gently remove the bag clip (shake out bag contents). Insert cleaned/new bag. Install back cover.

7



Wrap cord and store on the hook. Check the brushes and remove debris then store the machine in a clean, dry place (indoors). Filter Maintenance

5

2

## **HEPA-filter**

- The HEPA-filter <u>can not</u> be cleaned or washed.
- Must be replaced when the HEPAfilter is clogged.
- Replace 1-2 times per year (depending on use).

**Pre-filter** 

 Replace the motor pre-filter after every fifth dust bag change (more often if needed)