

Recording a new cleaning plan



1 Place the yellow key on machine




2 Drive the machine in front of the Location tag



3 Wait until you see the screen above and the tag number




4 Drive to a chosen start point

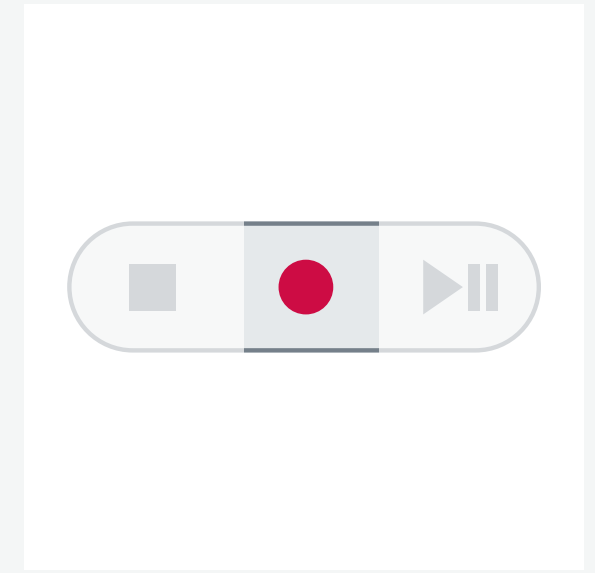


5 Press the "RECORD" button

CopyCat


6 Choose "CopyCat" and press the "RECORD" button



7 Turn ON scrubbing by pressing the button




8 Adjust cleaning settings

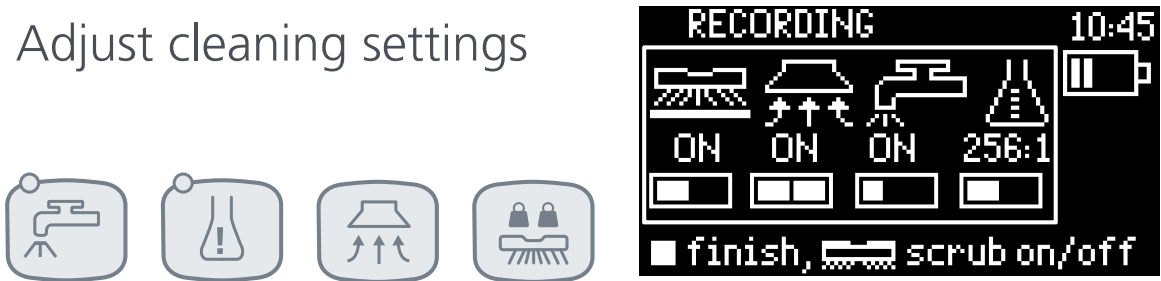


9 Create the CopyCat path:


- Start from wherever you see fit
- When finished, stop wherever you please

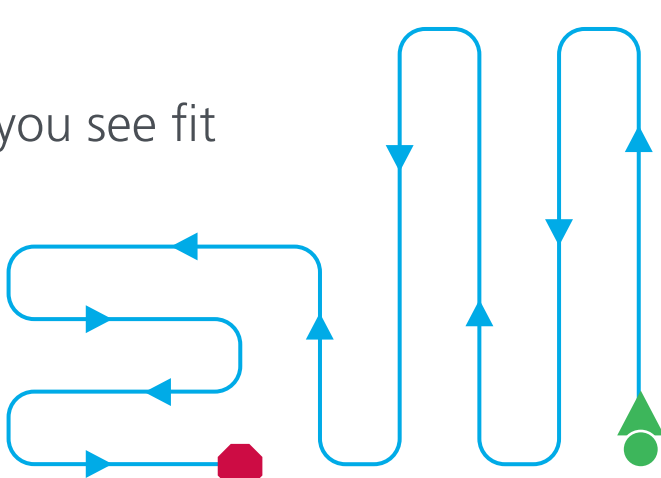

10 Press the "STOP" button

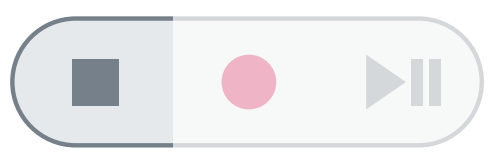


11 Save the plan with the "RECORD" button

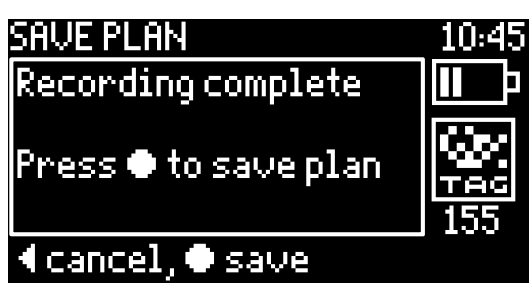


Fill-in

6 Choose "Fill-in" and press the "RECORD" button




7 Drive around the Fill-in area:


- Start driving counter-clockwise
- Continue driving after the first loop, and allow the machine to stop by itself

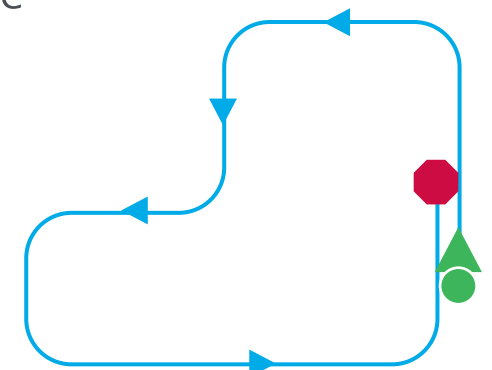


8 Press the "STOP" button

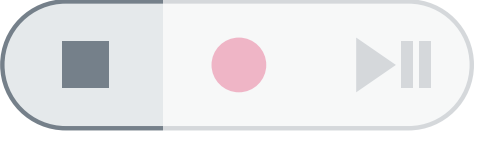

9 Adjust cleaning settings

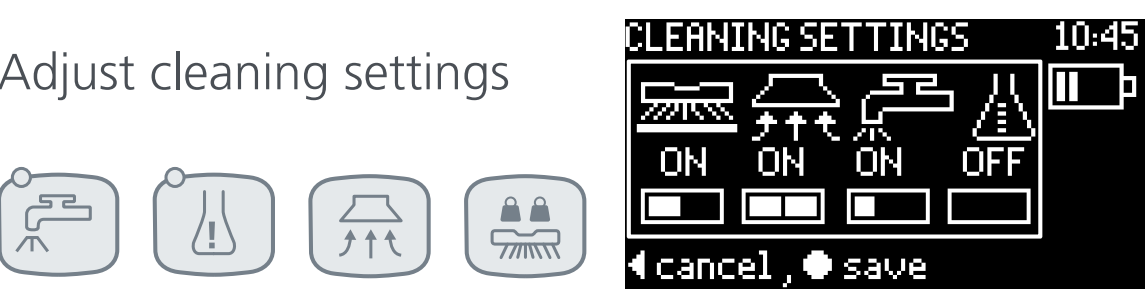

10 Save the plan with the "RECORD" button

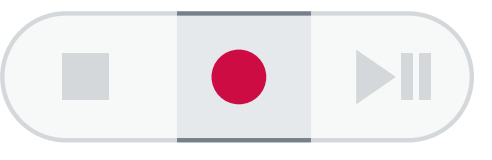


For videos and additional help, scan the QR code to access the Digital User Guides

Daily use – replaying a cleaning plan



1 Place the yellow OR blue key on the machine




2 Drive the machine in front of the Location tag




3 Wait until you see the screen above and the tag number




4 Drive to the start point of an existing plan. The above screen should appear.

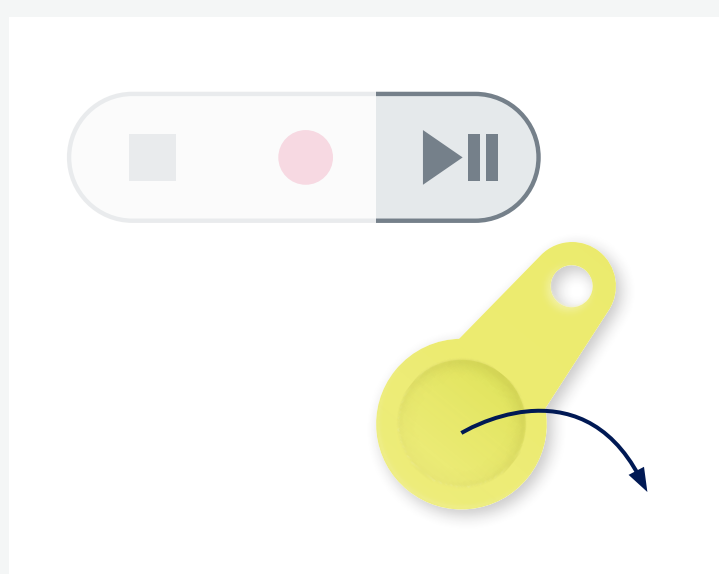

5 Press the "PLAY" button and remove the key

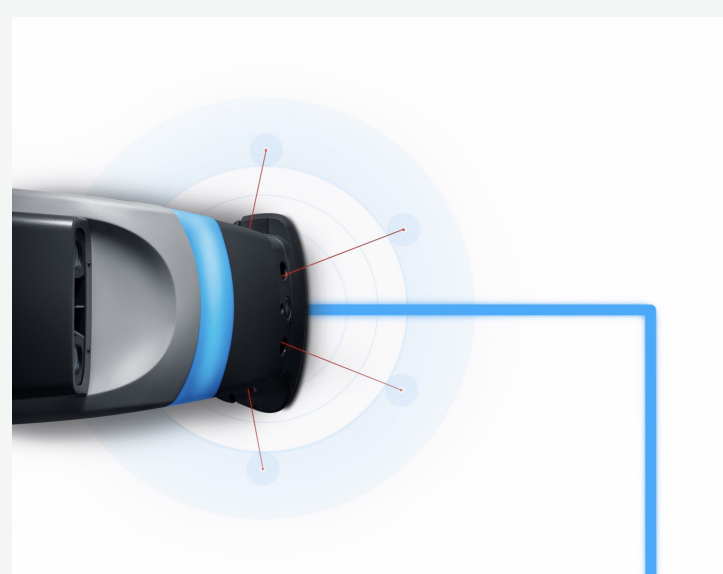

6 Cleaning will begin, and the machine will stop when the job is finished

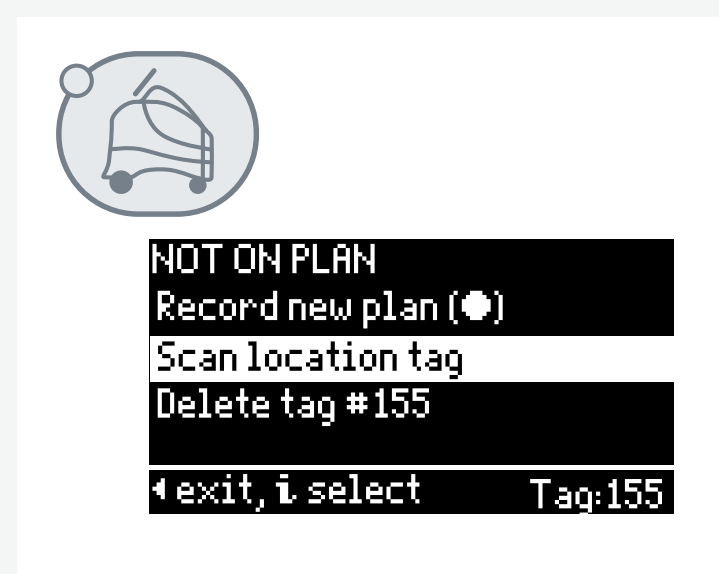

7 When moving to a new cleaning area with another tag, press the button above and select "Scan new location tag"

Daily maintenance



1 Top up fresh water through the fill point on the side of the machine, paying attention to the water level




2 Fill the detergent tank



3 Wipe all sensors with a clean microfiber cloth



4 Empty the dirty-water tank with a hose, and gently rinse the tank

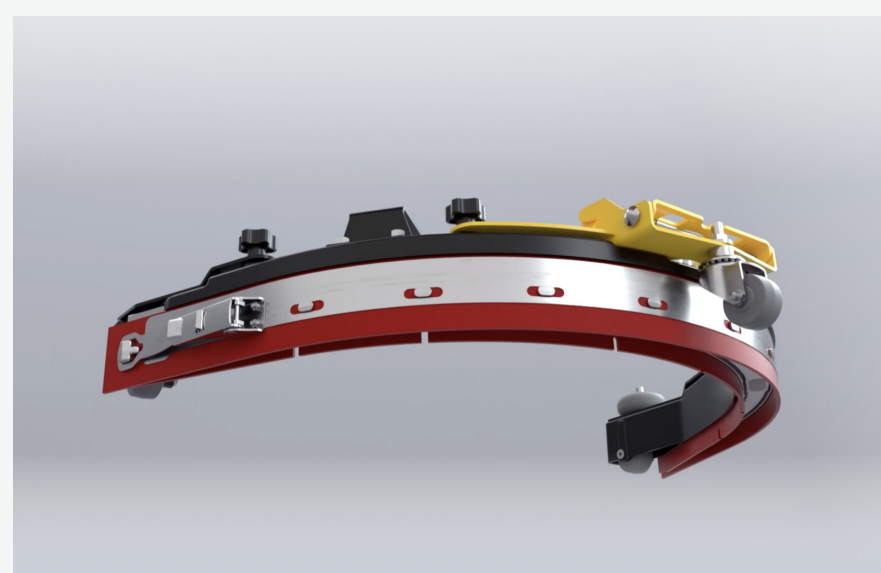

5 Clean the squeegee, and replace its pad if necessary



6 Charge the machine for 8-10 hours



For videos and additional help, scan the QR code to access the Digital User Guides