


Use and maintenance

Operating guidelines CEX410




Fill solution tank with fresh water. Add low foam detergent

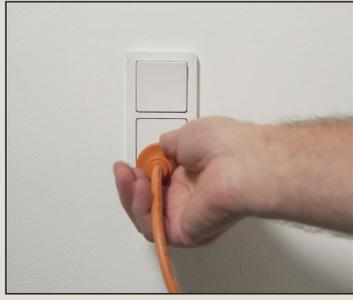

Plug in power cable



Adjust handle for ergonomic operator height

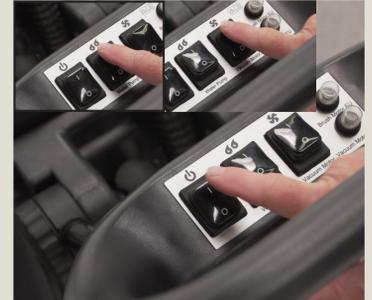

Switch on vacuum and solution and Turn on the main switch to start the machine



Press handle switch and start cleaning by moving the machine backwards. When you near the end of your cleaning path release the handle switch and continue a new cleaning path. Overlap slightly to insure no dirt is missed




Adjust the brush pressure to have the desired traction according to your needs as this changes with different type of carpets



Optional upholstery nozzle for furniture cleaning and optional floor tool for cleaning in difficult areas available




To install accessory: remove the suction hose on the lid and connect it to the empty left connection. Connect the accessory suction hose in the lid and connect the solution hose in quick coupling in the right bottom part. When both are connected make sure the machine in parked on the stand and start the machine with pump and suction buttons activated and start working with the accessory.

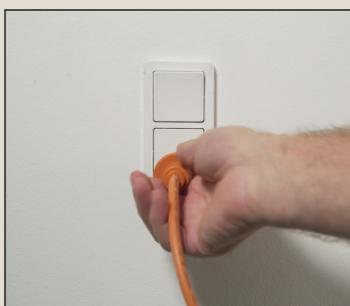

Unplug the machine

Maintenance

Operating guidelines CEX410

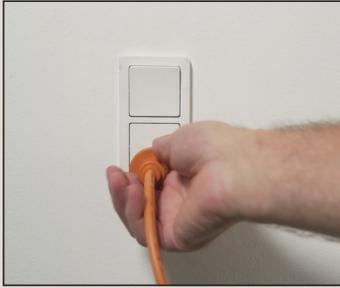

Unplug the machine



Empty the recovery tank by using the drain hose



Clean the recovery tank



Clean the float ball system inside. Clean the lid gasket



Empty the solution tank



At the bottom of the machine you can access to the solution filter. Keep the filter clean



Pull the brush out by the left side and clean it. To install again connect the right side first then push the left side of the brush in place. Remove the suction nozzle and clean it



When the brush is removed clean the brush housing and if needed check the two spray nozzles



Store machine in parked position



Leave recovery tank cover open

Local Viper dealer: _____

Phone number: _____

SN: _____